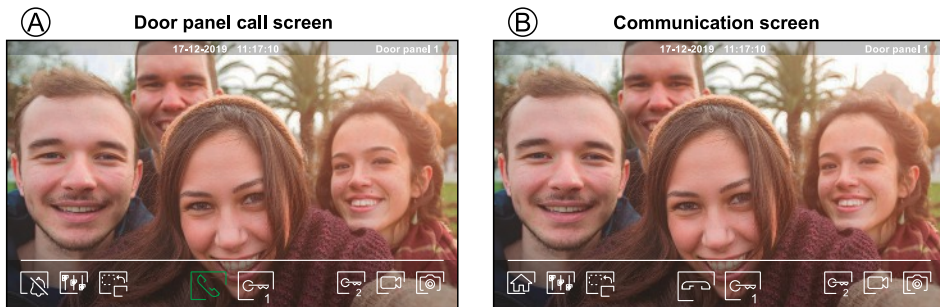 


(\*) **Description of the monitor when receiving a call and during communication:**

The **(A)** screen is displayed when receiving a call or pressing icon of the main menu. During a call, icon displayed on the screen will blink green (during the call process). In the top centre of the screen, the date and time are shown and, on the right, the source of the image is displayed. The call has a duration of 45 seconds.

The **(B)** screen is displayed during a communication process. In the top centre of the screen, the date and time are shown and, on the right, the source of the image is displayed. Communication has a maximum duration of 90 seconds.

The ringtone ends. End the communication with the door panel and then show the main menu.

Access the image and communication settings menu.

Change the source of the image as long as the system has more than one door panel or has an external camera connected and display has been activated (see monitor manual and corresponding door panel manual). It is possible to make the change during display, call and communication processes.

Start audio or end the communication with the door panel displayed. Communication has a maximum duration of 90 seconds. Once communication has ended, the screen will turn off.

1 Activate the lock release (or device connected to the relay output of the door panel) for 3 seconds (factory setting, programmable by the installer; see monitor manual and corresponding door panel manual). During activation, indicator will illuminate.

2 Activate the lock release (or device connected to the relay output of the door panel) for 3 seconds (factory setting, programmable by the installer; see monitor manual and corresponding door panel manual). During activation, indicator will illuminate.

A few seconds after receiving a call, it automatically takes a photograph. In the top left of the screen, icon is displayed and indicator will illuminate. By pressing, it takes a photograph. (See monitor manual to set the recording mode).

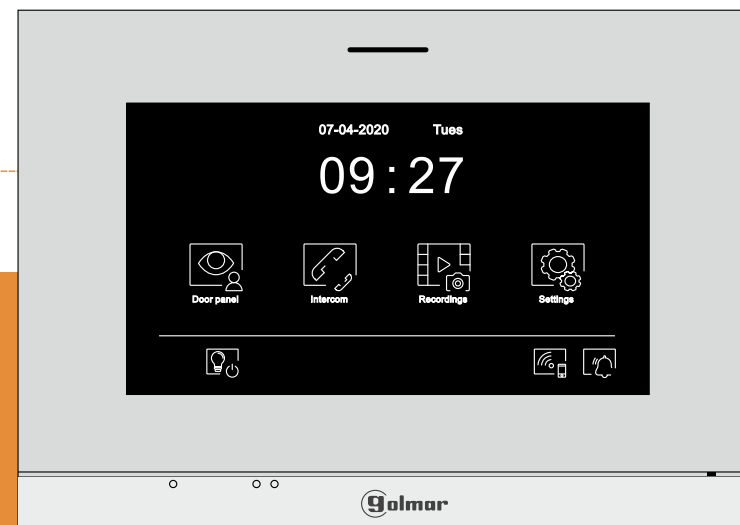 
if you have a MicroSD card inserted, it starts recording a 15-second video within a few seconds of receiving the call. Otherwise, it will take a photograph. In the top left of the screen, icon is displayed and indicator will illuminate. By pressing, it records a video. (See monitor manual to set the recording mode).

**Important: New settings menu with ART 7W/G2+ monitor with V04 and later**

(\*) For more information, see "TART 7W/G2+ user manual (cód. 50122463)" <https://doc.golmar.es/search/manual/50122463>



## ART 7W/G2+ MONITOR



## QUICK GUIDE

Golmar se reserva el derecho a cualquier modificación sin previo aviso.

Golmar se réserve le droit de toute modification sans préavis.

Golmar reserves the right to make any modifications without prior notice.

50122724



Web code 50122463

TART 7W/G2+ EN GR REV.0221

golmar@golmar.es

www.golmar.es



 
 


 
 


## SAFETY PRECAUTIONS

- **Always disconnect the power supply** before installing or making modifications to the device
- The fitting and handling of these devices must be carried out by **authorised personnel**
- The wiring must run at least **40 cm. away from any other wiring**
- Do not overtighten the screws on the connector
- Install the monitor in a dry protected location free from the risk of dripping or splashing water
- Do not place in humid, dusty or smoky locations, or near sources of heat
- Before connecting the device to the mains, check the connections between the door panel, power supply, distributors and monitors
- Always follow the instructions contained in this manual

## (\*) CHARACTERISTICS

- Hands-free monitor.
- 7" colour screen.
- Touch screen for access and selection of menu function.
- Monitor with Wifi transmission for call forwarding to a smartphone.
- Monitor with simple installation (non-polarised 2 wires bus).
- User menu.
- Installer menu.
- Image and communication settings menu.
- Output auxiliary call repeater (max. 50mA/12V).
- "HZ" input for calls from apartment front door.
- Hidden Push buttons for Start/Stop Communication & Door Opening.
- Notification leds.
- Configuration switches to assign the call address (1 to 128) and end of line.

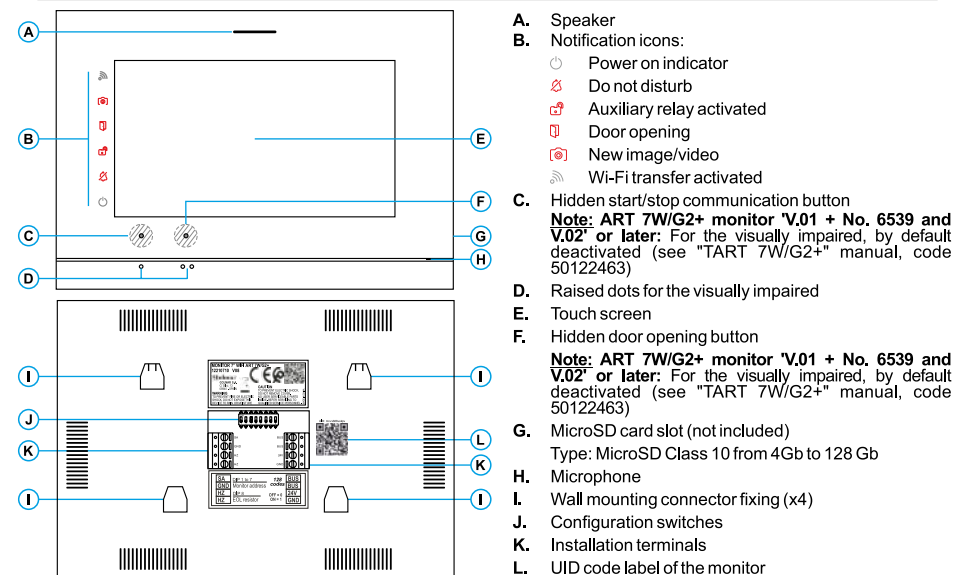 
## (\*) SYSTEM OPERATION

- To make a call, the visitor must press the button of the apartment; an audible sound indicates that the call is being made and LED  will turn on. If vocal synthesis is enabled, a 'Call is in progress' message appears indicating that a call is being made. At this moment, the apartment's monitors receive the call. If another apartment is called by mistake, press the button for the correct apartment and the first call will be cancelled.
- Upon receiving the call, the image will appear on the screen of the master monitor (and slave 1, if it exists) without the visitor knowing and icon  displayed on the screen will blink green. To view the image from slave monitors 2 or 3, press the screen for the image to appear. If the call is not answered within 45 seconds, LED  will turn off and the system will become free.
- To establish communication, press off-the-hook icon  on the screen. Door panel LED  will turn off and the led  will turn on.
- Connection will last for 90 seconds or until on-the-hook icon  is pressed on the screen. When communication ends, LED  will turn off and the system will become free. If vocal synthesis is enabled, a 'Communication is finished' message will indicate that the call is over.
- To open door  of the door panel, press the corresponding icon on the screen during the call or communication processes: one press will activate the lock release for 3 seconds and LED  will also turn on for 3 seconds. If vocal synthesis is enabled, a 'Door is open' message will be indicated on the door panel.
- Detailed operation and configuration of the monitor, see "TART 7W/G2+" user manual.

## (\*) INSTALATION OF THE MONITOR

- (\*) For more information, see "TART 7W/G2+" user manual (cód. 50122463)  
<https://doc.golmar.es/search/manual/50122463>

## (\*) DESCRIPTION MONITOR



## (\*) Monitor address (code) setup: (Note: Monitor with V.07 or later version).

## Building / Villa (Nexa Door Panel)

**Dip1-Dip7:** Sets the monitor address (addresses 1 to 128).

The switches set to OFF have a zero value. The values of the switches set to ON are shown in the table below. The monitor code is the sum of the values of the switches set to ON

**Important:** Apartment 1 (Dip1 to ON & Dip2-Dip7 to OFF).

Switch number:	1	2	3	4	5	6	7
Value when ON:	1	2	4	8	16	32	64



Example: 0+0+4+0+16+0+0 = 20

## \* Chalet (SOUL Door Panel)

**Dip1-Dip7:** These assign the address of the monitor to call button on the door panel.



(f) Apartment 1 (Dip 1 to ON) ART 7W/G2+ Monitor with V04 and later.



Manual  
Kit Soul/Art 7W

**Dip8:** This activates the end-of-line resistance in the ON position. Activate it on monitors where the bus cable ends. Deactivate it only in intermediate monitors.



**Note:** If there are more than 1 monitor in the apartment, see "TART 7W/G2+" manual to define the monitor as slave 1, slave 2 or slave 3 (by function code). The WiFi Monitor must be always the Master.

- (\*) For more information, see "TART 7W/G2+" user manual (cód. 50122463)  
<https://doc.golmar.es/search/manual/50122463>