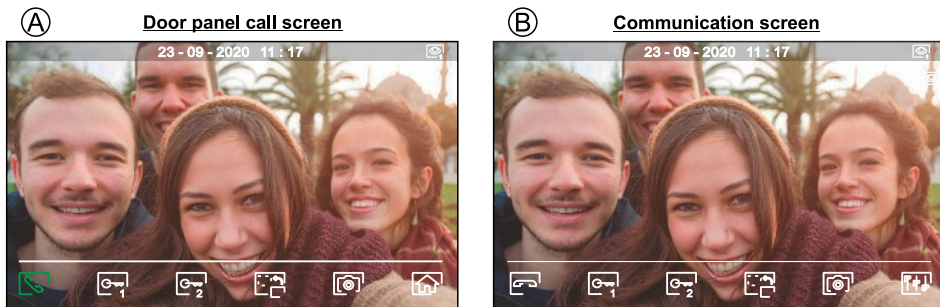 


(*) **Description of the monitor when receiving a call and during communication.**

The (A) screen is displayed when receiving a call or pressing icon of the main menu. During a call, icon displayed on the screen will blink green (during the call process). In the top centre of the screen, the date and time are shown and, on the right, the source of the image is displayed. The call has a duration of 45 seconds.

The (B) screen is displayed during a communication process. In the top centre of the screen, the date and time are shown and, on the right, the source of the image is displayed. Communication has a maximum duration of 90 seconds.

Press the hidden button below icon to cancel the current call or display and return to the main menu.

Press the hidden button below icon to access the image and monitor in communication volume settings menu. Go to the option to be modified by pressing the button/ hidden button below corresponding icons /, change to the desired level by pressing the hidden buttons below corresponding icons / and validate the changes made by pressing the hidden button below icon .

Press the hidden button below icon to change the source of the image as long as the system has more than one door panel or has an external camera connected and display has been activated (see monitor manual and corresponding door panel manual). It is possible to make the change during display, call and communication processes.

Press the button below icon / to start audio or end the communication with the door panel displayed. Communication has a maximum duration of 90 seconds. Once communication has ended, the screen will turn off.

Press the button below icon to activate the lock release (or device connected to the relay 1 output of the door panel) for 3 seconds (factory setting, programmable by the installer; see monitor manual and corresponding door panel manual). During activation, indicator will illuminate.

Press the hidden button below icon to activate the lock release (or device connected to the relay 2 output of the door panel) for 3 seconds (factory setting, programmable by the installer; see monitor manual and corresponding door panel manual). During activation, indicator will illuminate.

A few seconds after receiving a call, it automatically takes a photograph. In the top left of the screen, icon is displayed and indicator will illuminate.

Press the button below icon for 1 second, it takes a photograph. (See monitor manual to set the recording mode).

 
if you have a MicroSD card inserted, it starts recording a 15-second video within a few seconds of receiving the call. Otherwise, it will take a photograph. In the top left of the screen, icon is displayed and indicator will illuminate.

Press the button below icon for 3 seconds, it records a video. (See monitor manual to set the recording mode).

(*) For more information, see "TART 7H/G2+ user manual (cód. 50122464)".
<https://doc.golmar.es/search/manual/50122464>



ART 7 /G2+ MONITOR

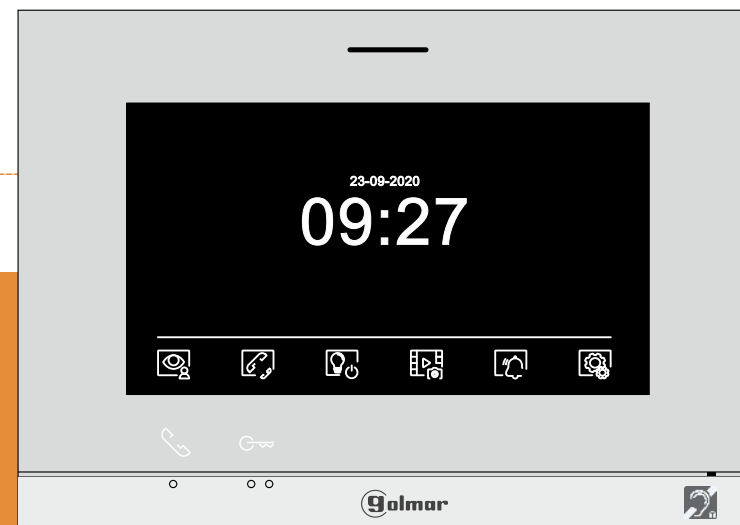

QUICK GUIDE

Golmar se reserva el derecho a cualquier modificación sin previo aviso.

Golmar se réserve le droit de toute modification sans préavis.

Golmar reserves the right to make any modifications without prior notice.












 


SAFETY PRECAUTIONS

- **Always disconnect the power supply** before installing or making modifications to the device.
- The fitting and handling of these devices must be carried out by **authorised personnel**.
- The wiring must run at least **40 cm. away from any other wiring**.
- Do not overtighten the screws on the connector.
- Install the monitor in a dry protected location free from the risk of dripping or splashing water.
- Do not place in humid, dusty or smoky locations, or near sources of heat.
- Before connecting the device to the mains, check the connections between the door panel, power supply, distributors and monitors.
- Always follow the instructions contained in this manual.

(*) CHARACTERISTICS

- Hands-free monitor.
- 7" TFT colour screen.
- The monitor ART 7H/G2+, interacts with hearing aids equipped with T-mode, making conversation between apartment and door panel easier.
- Push buttons/ hidden push buttons for access and selection of menu function.
- Monitor with simple installation (non-polarised 2 wires bus).
- User menu.
- Installer menu.
- Image and communication settings menu.
- Output auxiliary call repeater (max.50mA/12Vdc).
- "HZ" input for calls from apartment front door.
- Push button for Door release 1 and hidden push button for Door release 2.
- Notification leds.
- Configuration switches to assign the call address (1 to 128) and end of line.
- Function codes to define whether the monitor is master or slave (default: master).

 
(*) SYSTEM OPERATION

- To make a call, the visitor must press the button of the apartment; an audible sound indicates that the call is being made and the door panel LED  will turn on. If vocal synthesis is enabled, a 'Call is in progress' message appears indicating that a call is being made. At this moment, the apartment's monitors receive the call. If another apartment is called by mistake, press the button for the correct apartment and the first call will be cancelled.
- Upon receiving the call, the image will appear on the screen of the master monitor (and slave 1, if it exists) without the visitor knowing and icon  displayed on the screen will blink green. To view the image from slave monitors 2 or 3, press the one of the buttons (located above the raised dots for the visually impaired) of the monitor to display the image. If the call is not answered within 45 seconds, the door panel LED  will turn off and the system will become free.
- To establish communication, press the push button below off-the-hook icon  shown on the screen. Door panel LED  will turn off and the led  will turn on.  If you have a hearing aid, make sure that the hearing aid is between 15 and 25 cm away from the monitor to ensure maximum audio quality during communication with the door panel.
- Connection will last for 90 seconds or until the push button below on-the-hook icon  shown on the screen is pressed. When communication ends, door panel LED  will turn off and the system will become free. If vocal synthesis is enabled, a 'Communication is finished' message will indicate that the call is over.
- To open door  or  of the door panel, press the push button below of icon  displayed on the screen or press the hidden push button below of icon  displayed on the screen during the call or communication processes: one press will activate the lock release for 3 seconds and the door panel LED  will also turn on for 3 seconds. If vocal synthesis is enabled, a 'Door is open' message will be indicated on the door panel.
- Detailed operation and configuration of the monitor, see "TART 7H/G2+" monitor user manual.

(*) INSTALATION OF THE MONITOR

- (*) For more information, see "TART 7H/G2+ user manual (cód. 50122464)".
<https://doc.golmar.es/search/manual/50122464>

(*) DESCRIPTION MONITOR

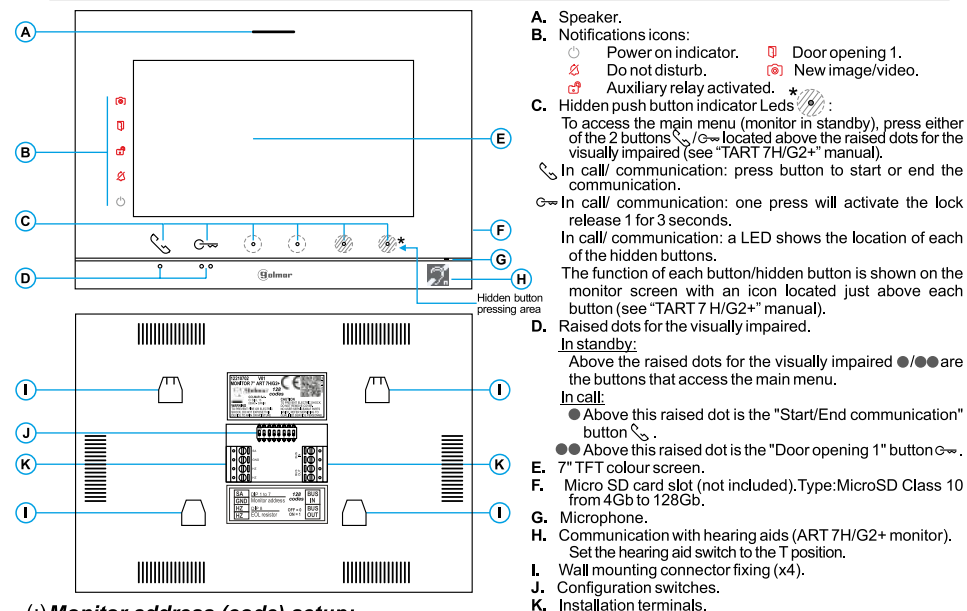

(*) Monitor address (code) setup:

Building / Villa (Nexa Door Panel)

Dip1-Dip7: Sets the monitor address (addresses 1 to 128).

The switches set to OFF have a zero value. The values of the switches set to ON are shown in the table below. The monitor code is the sum of the values of the switches set to ON.

Important: Apartment 1 (Dip1 to ON & Dip2-Dip7 to OFF).

Table of values

Switch number: 1 2 3 4 5 6 7
 Value when ON: 1 2 4 8 16 32 64



Example: 0+0+4+0+16+0+0= 20

Dip8: This activates the end-of-line resistance in the ON position. Activate it in monitors where the bus cable ends. Deactivate it only in intermediate monitors.

Dip 8 to ON



Dip 8 to OFF




Note: To define whether the monitor is master or slave, entering the corresponding "Special code":
 "0550" Master (factory default), "0551" Slave 1, "0552" Slave 2 or "0553" Slave 3.

* Villa (Soul Door Panel)

Dip1 to Dip7: These assign the address of the monitor to call button on the door panel.

 Switches 4-7 must remain in the OFF position.



Dip8: This activates the end-of-line resistance in the ON position. Activate it in monitor where the bus cable ends. Deactivate it only in intermediate monitors.

Dip 8 to ON



Dip 8 to OFF



Note: To define whether the monitor is master or slave, entering the corresponding "Special code":
 "0550" Master (factory default), "0551" Slave 1, "0552" Slave 2 or "0553" Slave 3.

- (*) For more information, see "TART 7H/G2+ user manual (cód. 50122464)".
<https://doc.golmar.es/search/manual/50122464>